



# AHF (SVG) Boot Guide


## Basic Commissioning Settings For Plain English 4.3" Touchscreen

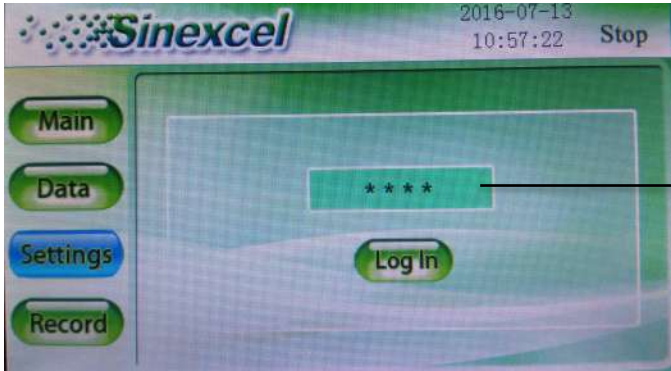


Password 080808

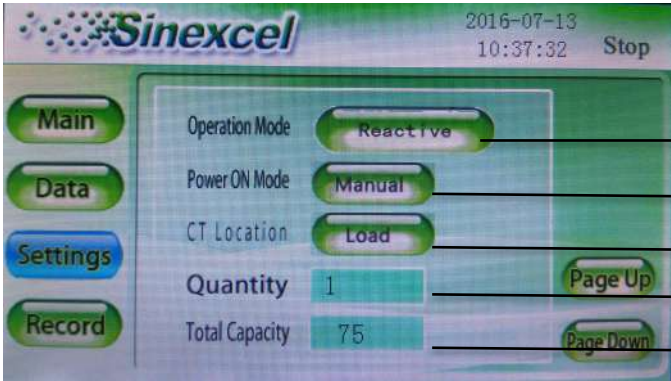

Reactive mode (SVG)  
 Harmonic mode (AHF)  
 Automatic  
 Load side  
 (Single module support supply side)  
 Modules quantity  
 Unit (A)  
 400v 150A AHF capacity is 150A  
 400v 100kvar SVG capacity is 150A

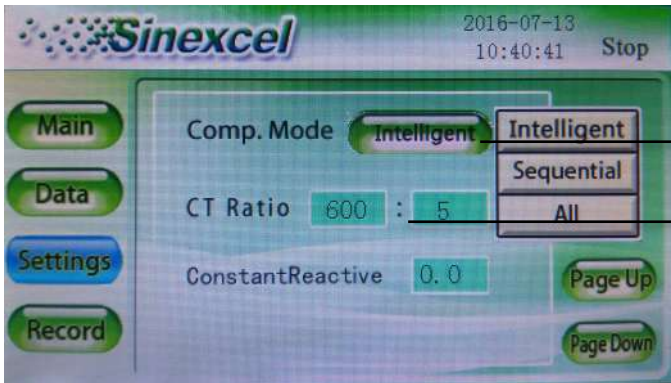

AHF  
 Intelligent is suitable for complicated condition  
 (high orders harmonic )  
 Sequential and All modes are quick and suitable  
 for simple condition (low orders harmonic)  
 SVG Choose Intelligent  
 150~10, 000

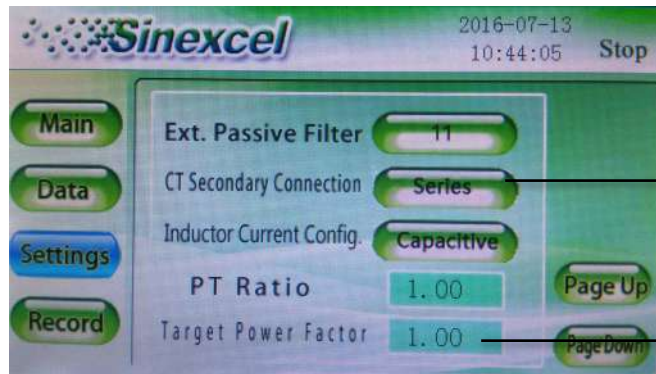

Always series

For reactive power compensation



Language setting

Before power on modules, please check the installation is right according to the user manual, if you have any problem please connect with Sinexcel product engineer. If happen boot failure and alarm, please provide the alarm message/parameters setting interface/ software version.